


WATCH DISPLAY

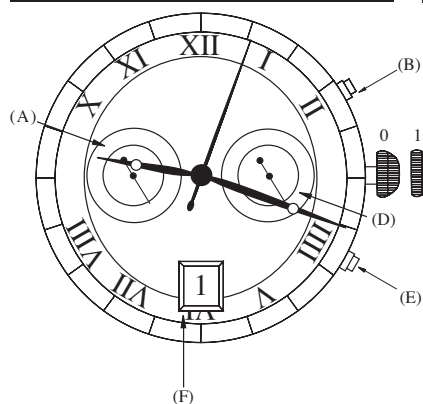

- A - DAY DIAL
- B - DAY CORRECTOR KNOB
- C - CROWN
- D - MONTH DIAL
- E - MONTH CORRECTOR KNOB
- F - DATE CALENDAR WINDOW

TIMESSETTING

This watch features three distinct watch face displays: day dial, month dial and a calendar date window.

1. Locate the crown on your Stauer watch (above diagram part C). Due to the crown being machine tightened, it may be a little difficult at first to loosen. Using gentle force, you will need to unlock the crown to make setting adjustments. To unlock the crown, turn the crown counterclockwise (toward you) 5 or 6 times until you feel the crown "pop out" on the spring. Your crown is now unlocked and in

the "0" (zero) position. Please note the three crown positions (0-1-2) in part C of above diagram.

2. Before the watch is worn for the first time, wind the crown, by hand, 15 to 20 cycles by rolling the crown clockwise (away from you) while in the "0" (zero) position.
3. To set the calendar date window (part F): Pull the crown out to the "1" position and rotate the crown counterclockwise (toward you) for proper date selection.
4. To set the time: Pull the crown out to position "2" (part C) which will allow you to position watch hands for proper time selection. Once time is set, push crown back into original "0" (zero) position and tighten crown by turning clockwise.

5. To set the month dial (part D): Press the month button (part E) to advance the hand. The month hand will advance one month at a time after each press of the button.
6. To set the day dial (part A): Press the day button (part B) to advance the hand. The day hand will advance one day at a time after each press of the button.

† Please use the complimentary watch stylus enclosed (or ball point pen) to set month and day functions.

ADJUSTING CLASPS

1. To shorten or lengthen a hook on our watch bracelet, lay the watch down on a soft surface, insert a flat tool (tweezers) in the groove on the tab and lift up. After setting the desired size press the tab locks securely into position.
2. To adjust a fold-over buckle bracelet, carefully remove only the pushpin from the bracelet side (not the buckle side), using a sharp pointed tool. Reposition the pin as required.

IMPORTANT

- Please remember to wear your Stauer watch each day to ensure its lifelong accuracy and dependability for your timekeeping needs. By continually wearing your Stauer watch you will be taking full advantage of its state of the art automatic winding feature which allows the watch to function on kinetic power (simple body movement). The kinetic movement enables your Stauer watch to never require batteries and never require additional winding after it has been initially wound for the first time. Your Stauer watch will stop running if it is not properly kept in motion by daily wear. It can, however, be reactivated simply by instilling motion by being worn. When not wearing the watch, resting the watch on its side (with the crown facing towards the ceiling) will help to keep more accurate time.

A Watch Winder is a great investment to ensure all of your Stauer wristwatches are keeping correct time and ready for you at any time! Take advantage of our Watch Winder offers on our website. Visit us at, www.stauer.com to learn more about the fantastic benefits of owning a Watch Winder!

www.stauer.com

Stauer

HERITAGE OF ART & SCIENCE

Stauer Vendage Watch
INSTRUCTION MANUAL

