


WATCH DISPLAY

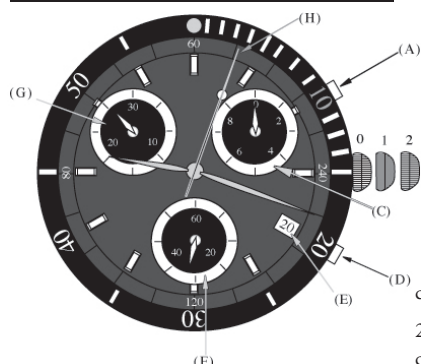

- A - START/STOP CHRONO BUTTON
B - CROWN
C - 1/10 SECOND TIMER
D - RESET CHRONO BUTTON
E - DATE WINDOW
F - SECONDS COUNTER
G - MINUTE COUNTER
H - CHRONO SECONDS COUNTER

TIMESETTING

Locate the crown on your Stauer watch (see diagram part B). Please note the three crown positions (0-1-2) in part c of above diagram.

1. To set the time: Unscrew and pull the crown out to position "2" (see diagram part B which will allow you to position watch hands for proper time selection. Rotate the crown clockwise until the desired time is set.

2. When finished setting the time, push the crown back to the "0" (zero) position and screw down crown (B). The small second hand (dial part F) begins to run.

SETTING THE DATE

1. Pull the crown out to the first position.
2. Turn the crown counter-clockwise to set the date (Part E).

• The date should not be adjusted between approximately 9pm and 01:00am.

3. After the date has been set, push the crown (part B) back to position "0" (zero) and screw down the crown.

USING THE CHRONOGRAPH

This chronograph is able to measure and display time in 1/10th second unit up to a maximum of 29 minutes (part G) 59 seconds (part H)

Measuring the time with the chronograph

1. The chronograph can be started and stopped each time button "A" is pressed.
2. Pressing button "D" resets the chronograph and the chronograph second hand (part F), chronograph minute hand (part G) and chronograph hour hand (part C) return to the zero position.

CHRONOGRAPH RESET (INCL. AFTER REPLACING BATTERY)

Chronograph Reset (includes after replacing the battery) This procedure should be performed when the chronograph second hand does not return to zero position after the chronograph has been reset and after the battery has been replaced.

1. Pull the crown out to position 2.
2. Press button "A" to set the chronograph second hand to the zero position. The chronograph hand can be advanced rapidly by continuously pressing or holding down button "A".
3. Once the hand has been set to zero position, return the crown to the normal position.

TIMESETTING CONT.

To return to normal watch function:

1. Press Button "D" to zero out all of the Chronograph hands.
2. Press Button "D" again to resume normal watch functions (note that the minute counter hand part "G" will return to the seconds position as if the chronograph feature had never been used.

IMPORTANT

Do not push the crown to the normal position while the chronograph second hand returns to the zero position. It stops on the way when the crown is returned to the normal position and its position is recognized as the zero position.

FEATURES

- Swiss Movement
- Two tone metal band
- Chronograph
- Band Length: 9 1/2"
- Band Width: 22mm
- Wrist accommodations: 6 3/4" to 8 1/2"
- Case Thickness: 11mm
- Case Diameter 41mm
- Tri-Tone Case
- Luminous Markers

ADJUSTING CLASPS

To adjust the band: Remove equal number of links from both sides of the closure by carefully sliding out the pins in each link. To do this, you will need to use a sharp pointed tool. Insert it into the recessed side of the link. With a solid tap, push the pin out until it is easy to pull the pin using needle nose pliers. Once the required amount of links are removed, join the remaining links together using the removed pins. It is necessary to secure the pins in place by making sure that they are flush with one side of each link. To ensure that watch is fitted properly, we recommend that your Stauer watch be handled by a professional.

Visit us at, www.stauer.com to learn more about the fantastic benefits of owning a Stauer Watch! www.stauer.com

Stauer

HERITAGE OF ART & SCIENCE

Stauer Biosphere Watch

INSTRUCTION MANUAL

