

# 

A - START/STOP BUTTON

- B CROWN
- C RESET BUTTON
- D REAL-TIME/MODE BUTTON
- E BACKLIGHT BUTTON

# TIMESETTING

This watch features hour, minute, second, month, date, and day of the week displays.

# TO SET THE TIME – HOUR, MINUTE AND SECOND HANDS

- 1. Pull the crown (part B) out to position "1" and rotate it to the desired time.
- 2. Once the correct time is set, push the crown back into original "0" (zero) position.

# TO SET THE TIME – DIGITAL DISPLAY

- 1. Press the Reset Button (part C) for two seconds and then press the Start/Stop Button (part A) to zero.
- 2. Press the Real-Time/Mode Button (part D) three times. The seconds display will blink. Select an item in

# CHRONOGRAPH SETTINGS

the following sequence by pressing the Start/Stop Button (part A):

- Second
- Minute
- Hour
- 12/24 hour format
- Month
- Day
- Week
- **3.** Press the Reset Button (part C) to return to Real Time mode.

### TO SET THE CHRONOGRAPH

The display range of the chronograph is 23 hours, 59 minutes and 59.99 seconds.

- **1.** To start the Chronograph feature, press the Start/Stop Button (part A).
- **2.** Once stopped, press the Reset Button (part C) to reset to zero.

# STOPWATCH SETTING

- To record split times, press the Reset Button (part C) while the Chrono is running to turn the split timer on/off.
- **4.** To stop coutning, press the Start/Stop Button (part A).
- **5.** To reset (set to zero) the split time display press the Reset Button (part C).
- **6.** To exit the Chronograph mode press the Real-Time/Mode Button (part D) – watch will return to the real-time mode.

### TO USE THE STOPWATCH

The display range of the timer is 23 hours, 59 minutes and 59 seconds.

1. Press and hold the Reset Button (part C) for two seconds to select the hour setting. Press the Real-Time/Mode Button (part D) to select the minute setting. Press the Start/Stop Button (part A) to adjust the flashing item.

# **DUAL TIME SETTING**

- **2.** Press the Reset Button (part C) again to finish setting.
- **3.** Press the Start/Stop Button (part A) to start and stop counting, and press the Reset Button (part C) to stop.
- **4.** Timer alarm sounds for 10 seconds when counting down to 0:00:00. The timer is automatically reset to its starting value after the alarm stops.

## TO SET THE DAILY ALARM/CHIME

- **1.** Press the Start/Stop Button (part A) to turn the alarm and the chime on/off.
- Press and hold the Reset Button (part C) for two seconds to select the hour setting. Press the Real-Time/Mode Button (part D) to select the minute setting. Press the Start/Stop button (part A) to adjust the flashing item.

# **DUAL TIME SETTING**

**3.** The alarm will sound for 20 seconds when set time is reached.

### **DUAL TIME SETTING**

- 1. In the Dual Time mode, press and hold the Reset Button (part C) for two seconds to select the minute setting. Press the Real-Time/Mode Button (part D) to select hour setting. Press the Start/Stop Button (part A) to adjust the flashing item.
- **2.** Press the Reset Button (part C) again to finish setting and to return to Dual Time display mode.

### **FEATURES**

- Digital chronograph and analog functions
- Stainless steel back
- Luminescent hands
- Electroluminescence backlight (EL Backlight)
- Daily alarm function
- Black silicone strap
- Water resistant to 3 ATM



Stauer Enduro Hybrid Watch
INSTRUCTION MANUAL



Visit us at www.stauer.com to learn more about the fantastic benefits of owning a Stauer Watch!

www.stauer.com