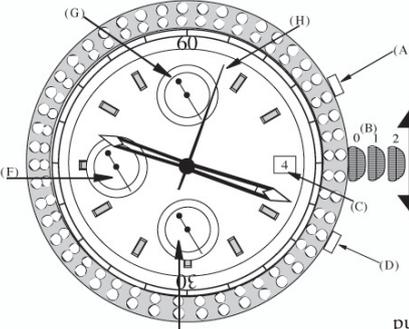


WATCH DISPLAY	TIMESSETTING	CHRONOGRAPH FUNCTION	CHRONOGRAPH CONT.
 <p>A - START/STOP CHRONO BUTTON B - CROWN C - DATE WINDOW D - RESET CHRONO BUTTON E - SECONDS DIAL F - CHRONO HOURS G - MINUTE COUNTER H - CHRONO SECONDS HAND</p>	<p>Locate the crown on your Stauer watch (diagram part B). Please note the three crown positions (0-1-2).</p> <p>SETTING THE TIME</p> <ol style="list-style-type: none"> 1. Pull the crown (part B) out to position "2" and rotate the crown clockwise to move watch hands to desired time position. 2. Once finished setting the time, push the crown back to the "0" (zero) position. The small second hand (part E) will begin to rotate. <p>SETTING THE DATE</p> <ol style="list-style-type: none"> 1. Pull the crown (part B) out to position "1". 2. Turn the crown counter-clockwise to set the date (Part C). 	<ul style="list-style-type: none"> • The date should not be adjusted between approximately 9pm and 1:00am. 3. After the date has been set, push the crown (part B) back to position "0" (zero). <p>USING THE CHRONOGRAPH</p> <p>This chronograph is able to measure time up to 11 hours, 59 minutes, and 59 seconds.</p> <p>Measuring the time with the chronograph:</p> <ol style="list-style-type: none"> 1. The chronograph can be started and stopped by pressing the Start/Stop Button (part A). 2. Pressing the Reset Button (part D) resets the chronograph and the chronograph second hand (part H), chronograph minute hand (part G) and chronograph hour hand (part F) return to the zero position. 	<p>To return to normal watch function:</p> <ol style="list-style-type: none"> 1. Press the Reset Button (part D) to zero out all of the Chronograph hands. 2. Press the Reset Button (part D) again to resume normal watch functions Please note that the watch second hand (part E) will return to the seconds position as if the chronograph feature had never been used.

CHRONOGRPAH RESET	FEATURES	IMPORTANT
<p>CHRONOGRAPH RESET (INCL. AFTER REPLACING BATTERY)</p> <p>Chronograph Reset (includes after replacing the battery) This procedure should be performed when the chronograph second hand does not return to zero position after the chronograph has been reset and after the battery has been replaced.</p> <ol style="list-style-type: none"> 1. Pull the crown (part B) out to position 2. 2. Press the Start/Stop Button (part A) to set the chronograph second hand to the zero position. The chronograph hand can be advanced rapidly by continuously pressing the Start/Stop Button (part A). 3. Once the hand has been set to zero position, return the crown to the normal position. 	<ul style="list-style-type: none"> - Precise movement - Rose gold-finished stainless steel case and smooth bracelet - Stainless steel back - Bezel features 104 lab-created Diamond<i>Aura</i>® rounds - 2 1/2 total carat weight - Water resistant to 10 ATM - Cotswold™ Mineral Crystal 	<p>Do not push the crown to the normal position while the chronograph second hand returns to the zero position. It stops on the way when the crown is returned to the normal position and its position is recognized as the zero position.</p> <p>ADJUSTING CLASPS</p> <p>To adjust a folded over buckle bracelet, carefully remove only the pushpin from the bracelet side (not the buckle side), using a sharp pointed tool. Reposition the pin as required.</p> <p>Visit us at www.stauer.com to learn more about the fantastic benefits of owning a Stauer Watch!</p> <p>www.stauer.com</p>

Stauer[®]
HERITAGE OF ART & SCIENCE

Stauer Ladies Diamond*Aura*[®]
L'Avenir Watch

INSTRUCTION MANUAL

