(G) (A) (B) (B) (C) (C) (D) (E) 1. Locate (above (

TIMESETTING

This watch features four distinct watch face display dials: month, day, date and a 24-hour military day/night dial.

- 1. Locate the crown on your Stauer watch (above diagram part C). Due to the crown being machine tightened, it may be a little difficult at first to loosen. Using gentle force, you will need to unlock the crown to make setting adjustments. To unlock the crown, turn the crown counterclockwise (toward
- you) 5 or 6 times until you feel the crown "pop out" on the spring. Your crown is now unlocked and in the "0" (zero) position. Please note the three crown positions (0-1-2) in part C of above diagram.
- 2. Before the watch is worn for the first time, wind the crown, by hand, 15 to 20 cycles by rolling the crown clockwise (away from you) while in the "0" (zero) position.
- 3. To set the time: Pull the crown out to position "2" (part C) which will allow you to position watch hands for proper time selection. Once time is set, push crown back into original "0 (zero) position and tighten crown by turning clockwise.

- 4. To set the month dial (part A): Press the month button (part B) to advance the hand. The month hand will advance one month at a time after each press of the button.
- 5. To set the date dial (part D): Press the date button (part E) to advance the hand. The date hand will advance one date at a time after each press of the button.
- **6.** To set the day dial (part H): Press the day button (part G) to advance the hand. The day hand will advance one day at a time after each press of the button.
- 7. The 24-hour military day/night dial (part F) displays every hour of the day and is an added feature that does not require setting. The day/night dial is set by setting the time. Take this into consideration when setting the time on your watch.

ADJUSTING CLASPS

B - MONTH CORRECTOR KNOB

E - DATE CORRECTOR KNOB

F - 24 HOUR DAY/NIGHT DIAL

G - DAY CORRECTOR KNOB

C - CROWN

D - DATE DIAL

- 1. To shorten or lengthen a hook on our watch bracelet, lay the watch down on a soft surface, insert a flat tool (tweezers) in the groove on the tab and lift up. After setting the desired size press the tab locks securely into position.
- 2. To adjust a fold—over buckle bracelet, carefully remove only the pushpin from the bracelet side (not the buckle side), using a sharp pointed tool. Reposition the pin as required.

IMPORTANT

• Please remember to wear your Stauer watch each day to ensure its lifelong accuracy and dependability for your timekeeping needs. By continually wearing your Stauer watch, you will be taking full advantage of its state of the art automatic winding feature which allows the watch to function utilizing your simple body movement. It can, however, be reactivated simply by instilling motion by being worn. When not wearing the watch, resting the watch on its side (with crown facing towards the ceiling) will help to keep more accurate time.

A Watch Winder is a great investment to ensure all of your Stauer wristwatches are keeping correct time and ready for you at any time! Take advantage of our Watch Winder offers on our website. Visit us at, www.stauer.com to learn more about the fantastic benefits of owning a Watch Winder!

www.stauer.com



Stauer Graves Watch
INSTRUCTION MANUAL

