


WATCH DISPLAY

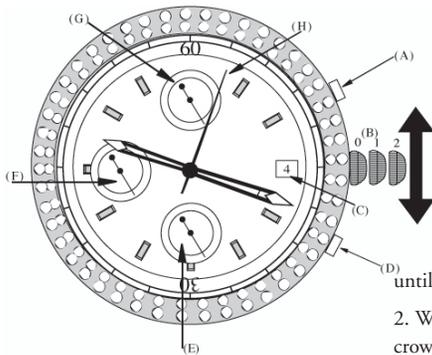

- A - START/STOP CHRONO BUTTON
- B - CROWN
- C - DATE WINDOW
- D - RESET CHRONO BUTTON
- E - SECONDS DIAL
- F - CHRONO HOURS
- G - MINUTE COUNTER
- H - CHRONO SECONDS HAND

TIMESETTING

Locate the crown on your Stauer watch (see diagram part B). Please note the three crown positions (0-1-2) in part B of above diagram.

1. To set the time: Pull the crown out to position "2" (see diagram part B which will allow you to position watch hands for proper time selection. Rotate the crown clockwise until the desired time is set.
2. When finished setting the time, push the crown back to the "0" (zero) position. The small second hand (dial part E) begins to rotate.

SETTING THE DATE

1. Pull the crown out to position "1".
2. Turn the crown counter-clockwise to set

the date (Part C).

- The date should not be adjusted between approximately 9pm and 21:00pm.
3. After the date has been set, push the crown (part B) back to position "0" (zero).

USING THE CHRONOGRAPH

This chronograph is able to measure and display time in 1/10th second unit up to a maximum of 11 hours (part F) 59 minutes (part G) 59 seconds (part E)

Measuring the time with the chronograph:

1. The chronograph can be started and stopped each time button "A" is pressed.
2. Pressing button "D" resets the chronograph and the chronograph second hand (part H), chronograph minute hand (part G) and chronograph hour hand (part F) return to the zero position.

CHRONOGRAPH RESET (INCL. AFTER REPLACING BATTERY)

Chronograph Reset (includes after replacing the battery) This procedure should be performed when the chronograph second hand does not return to zero position after the chronograph has been reset and after the battery has been replaced.

1. Pull the crown out to position 2.
2. Press button "A" to set the chronograph second hand to the zero position. The chronograph hand can be advanced rapidly by continuously pressing button "A".
3. Once the hand has been set to zero position, return the crown to the normal position.

TIMESETTING CONT.

To return to normal watch function:

1. Press Button "D" to zero out all of the Chronograph hands.
2. Press Button "D" again to resume normal watch functions (note that the watch second hand part "E" will return to the seconds position as if the chronograph feature had never been used.)

FEATURES

- Quartz Movement
- Chronograph
- Band Width: 18mm
- Wrist accommodations up to 8"
- Case Thickness: 12 mm
- Case Diameter 36 mm

IMPORTANT

Do not push the crown to the normal position while the chronograph second hand returns to the zero position. It stops on the way when the crown is returned to the normal position and its position is recognized as the zero position.

ADJUSTING CLASPS

To adjust a fold-over buckle bracelet, carefully remove only the pushpin from the bracelet side (not the buckle side), using a sharp pointed tool. Reposition the pin as required.

Visit us at, www.stauer.com to learn more about the fantastic benefits of owning a Stauer Watch! www.stauer.com

Stauer

HERITAGE OF ART & SCIENCE

Stauer Brillante Watch

INSTRUCTION MANUAL

