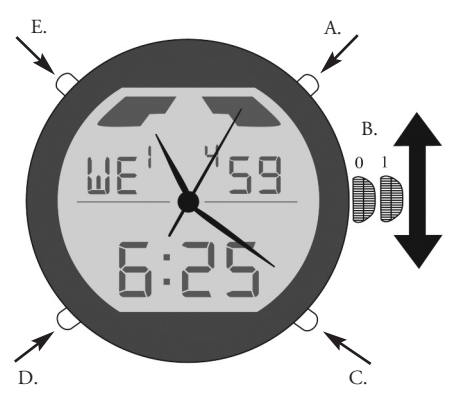


WATCH DISPLAY	TIMESSETTING	CHRONOGRAPH SETTINGS	ALARM SETTINGS
 <p>A - START/STOP BUTTON B - CROWN C - RESET BUTTON D - REAL-TIME/MODE BUTTON E - BACKLIGHT BUTTON</p>	<p>This watch features hour, minute, second, month, date, and day of the week displays.</p> <p><b>1. To set the Time:</b> Press the Real-Time/Mode Button (part D) three times. The seconds display will blink. Select an item in the following sequence by pressing the Reset Button (part C):</p> <ul style="list-style-type: none"><li>– Hour</li><li>– Minute</li><li>– Month</li><li>– Date</li><li>– Day of the Week</li><li>– Second</li></ul> <p><b>2.</b> Once the time is set, press the Real-Time/Mode Button (part D)</p>	<p><b>The display range of the chronograph is 23 hours, 59 minutes and 59.99 seconds.</b></p> <ol style="list-style-type: none"><li>Press the Real-Time /Mode Button one time (part D).</li><li>To start the Chronograph feature, press the Start/Stop Button (part A).</li><li>Once stopped, press the Reset Button (part C) to reset to zero.</li><li>To record split times, press the Reset Button (part C) while the Chrono is running to turn the split timer on and off.</li><li>To stop counting, press the Start/Stop Button (part A).</li><li>To reset (set to zero) the split time display press the Reset Button (part C).</li><li>To exit the Chronograph mode press the Real-Time/Mode Button (part D) – watch will return to the real-time mode.</li></ol>	<p><b>TO SET THE DAILY ALARM/CHIME</b></p> <ol style="list-style-type: none"><li>Press the Real-Time/Mode Button (part D) two times.</li><li>Press the Start/Stop Button (part A) to turn the Daily Alarm/Chime on and off.</li><li><b>To set the Daily Alarm Hour</b> Press the Reset Button (part C) to select “hour” or “minute” setting. Press the Start/Stop Button (part A) to adjust the hours and minutes when flashing. Press the Reset Button (part C) to confirm time change. Press the Real-Time/Mode Button (part D) to return to real-time mode.</li><li><b>To turn the Alarm Off:</b> Press either the Start/Stop Button (part A) or the Reset Button (part C) to turn the alarm off. Press the Real-Time/Mode Button (part D) to turn on the snooze function. The alarm will sound again after five minutes.</li></ol>

ALARM SETTINGS, CONT.	FEATURES
<p><b>5.</b> Pay attention to AM/PM – a “P” will display to the left of the hours to indicate PM time.</p>	<ul style="list-style-type: none"><li>- Two precise Quartz movements (digital and analog)</li><li>- 12 digit LCD display (hour minute, second, month, day, and week)</li><li>- Daily alarm and hourly chime</li><li>- Snooze</li><li>- 12/24H format selection</li><li>- 1/100 second chronograph with split functions</li><li>- EL backlight</li></ul>

Visit us at [www.stauer.com](http://www.stauer.com) to learn more about the fantastic benefits of owning a Stauer Watch!

**www.stauer.com**

**Stauer®**  
HERITAGE OF ART & SCIENCE

Stauer Advancer Hybrid Watch  
INSTRUCTION MANUAL

