WATCH DISPLAY

- A Month Button
- B Crown
- C Date Window
- D Day of the Week Button E 24 Hour Day/Night Dial F Day of the Week Dial

- G Month Dial

TIMESETTING

Locate the crown on your Stauer watch (part B) and please note the three crown positions

Before the watch is worn for the first time, wind the crown, by hand, 15 to 20 cycles by rolling the crown clockwise (away from you) while in the "0" (zero) position.

TO SET THE TIME

- 1. Pull the crown (part B) out to position "2" and rotate it to the desired time.
- 2. Once the correct time is set, push the crown back into "0" (zero) position.

TO SET THE DATE DIAL (PART C)

- 1. Pull the crown (part B) out to position
- "1" and rotate it counter-clockwise (toward from you) to the desired date.
- 2. Once the correct date is set, push the crown back into "0" (zero) position.

TIMESETTING, CONT.

TO SET THE MONTH DIAL (PART G)

1. Press the Month Button (part A) to advance the Month Dial (part G). The month will advance one month at a time with each press of the button.

TO SET THE DAY DIAL (PART F)

1. Press the Day of the Week Button (part D) to advance the Day of the Week Dial (part F). The day will advance one day at a time with each press of the button.

TO SET THE 24 HOUR DIAL (PART E)

1. The 24 Hour Dial (part E) automatically corresponds with the time and requires no additional setting. The 24 Hour Dial displays every hour of the day, so please take this into consideration when setting the time on your watch.

FEATURES

- Automatic movement
- 27 jewels
- Stainless steel case back
- Cotswold™ mineral crystal
- Date window
- Month and Day subdials
- Water resistant to 3 ATM



Stauer Watchmaker Watch

INSTRUCTION MANUAL



Visit us at www.stauer.com to learn more about the fantastic benefits of owning a Stauer Watch!

www.stauer.com