


WATCH DISPLAY

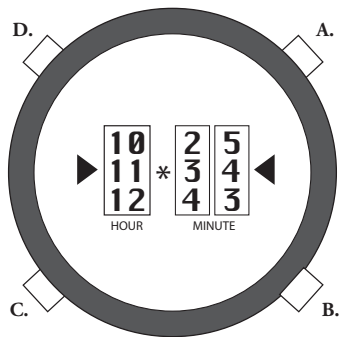

- A - Right Minute Digit Button
- B - Left Minute Digit Button
- C - Hour Adjustment Button
- D - Time Setting Adjustment Button

SETTINGS

BEFORE TIMESETTING

The watch must be in the 12:00 position prior to setting the time.

1. Press button D and hold for 2 seconds to unlock the drums and allow them to move.
2. Press button C to advance the hour drum to 12 o'clock position.
3. Press B to adjust the left minute digit to 0.
4. Press A to adjust the right minute digit to 0.
5. Press button D to lock and set time to 12:00.

TO SET THE TIME

1. Press button C and hold for 2 seconds. The hour digit will move. Continue pressing button C until desired hour is selected.
2. Press button B to adjust the left minute digit to desired time.
3. Press button A to adjust the right minute digit to desired time.
4. Press button D to lock and set time.

FEATURES

- Precision movement
- Stainless steel case, caseback and crown
- Genuine leather band
- Water resistant to 3 ATM

Stauer®

Afford the Extraordinary.

Stauer Drum Watch

INSTRUCTION MANUAL



Visit us at www.stauer.com
to learn more about the fantastic
benefits of owning a Stauer Watch!

www.stauer.com