


WATCH DISPLAY

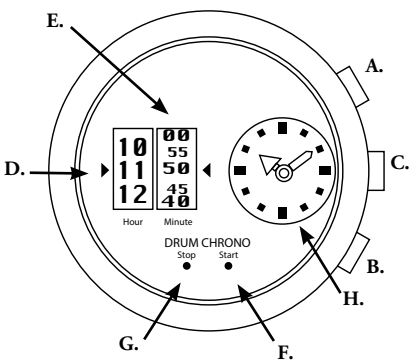

- A - Start/Stop Button  
B - Reset/Time Setting Button  
C - Crown  
D - Hour Roller  
E - Minute Roller  
F - Stopwatch Start/Counting Indicator  
G - Stopwatch Indicator  
H - Analog Dial

TIMESETTING

**BEFORE TIMESETTING - The watch must be in the 12:00 position prior to setting the time.**

1. Press and hold the Reset/Time Setting Button (part B) for 2 seconds. The Hour roller (part D) will start rotating and stop. Press the Start/Stop button (part A) to adjust the roller display to "12".

2. Press the Reset/Time Setting Button (part B) once. The Minute Roller (part E) will start rotating and stop. Press the Start /Stop Button (part A) to adjust the roller display to "00".

**TO SET THE ROLLER TIME**

1. Press Reset/Time Setting Button (part B) once. The two rollers will start rotating and stop. This activates the Hour Roller (part D). Press the Start/Stop Button (part A) to advance to the desired time.

2. Press Reset/Time Setting Button (part B) again. The Minute Roller (part E) will start

USING THE CHRONOGRAPH

rotating and stop. This activates the Minute Roller (part E). Press the Start/Stop Button (part A) to advance to the desired time.

3. Press Reset/Time Setting Button (part B) once to complete the time setting.

**TO SET THE ANALOG TIME**

1. Press and hold the Crown (part C) for 2 seconds. The minute hand on the Analog Dial (part H) will start to move clockwise. Continue to press the Crown (part C) for 2 more seconds and release. The Hour and Minute hands will move automatically.

2. When the hands are close to the desired time, press the Crown (part C) to stop the hands. Press the Crown (part C) repeatedly to fine tune the hands to desired time. Wait 10 seconds for the time to set. Do not press any buttons. The Hour Roller (part D) will roll 1 round to confirm the time is set.

STOPWATCH FUNCTION

1. Press the Start/Stop Button (part A) to enter the Stopwatch mode. The stopwatch indicator (part G) will start flashing in RED and the roller on the left will show 12:00. This activates the stopwatch mode.

2. Press the Start/Stop Button (part A) again to start counting. The Stopwatch Start indicator (part F) will show GREEN flashing lights while the roller is counting seconds.

3. This stopwatch will use minutes as the unit. After the first 59 seconds, the minute roller (part E) will stop moving. It will then proceed with the timing on the Hour Roller (part D) up to 60 minutes. After 60 minutes, the timer will stop and return to the normal time mode.

4. To stop the counting over 60 seconds, press the Start/Stop Button (part A).

STOPWATCH FUNCTION

5. To reset the stopwatch, press the Reset/Time Setting Button (part B). Press again to return to normal time mode.

**NOTE:** Using the stopwatch function will consume more power from your watch.

FEATURES

- Chronograph Stopwatch Function
- Stainless steel case, caseback and crown
- Stainless steel band fits wrists to 8 1/2"
- Integrated drum roller and analog movement
- Water resistant to 3 ATM

Stauer®

Afford the Extraordinary.

Stauer Men's Drum Roller  
Chronograph Watch

INSTRUCTION MANUAL



Visit us at [www.stauer.com](http://www.stauer.com)  
to learn more about the fantastic  
benefits of owning a Stauer Watch!  
**[www.stauer.com](http://www.stauer.com)**