


WATCH DISPLAY

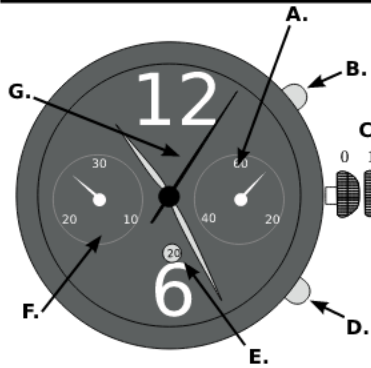

- A - Seconds Dial
- B - Start/Stop Button
- C - Crown
- D - Split/Reset Button
- E - Date Window
- F - Chronograph Minute Dial
- G - Chronograph Second Hand

TIMESSETTING

TO SET THE TIME

1. Pull the crown (part C) out to position “2” and rotate it to the desired time.
2. Once the correct time is set, push the crown back into “0” (zero) position. The Seconds Dial (part A) will start to run.

TO SET THE DATE

1. Pull the crown (part C) out to position “1” and rotate it clockwise (away from you) to the desired date (part E).
2. Once the correct date is set, push the crown back into “0” (zero) position.

NOTE: The date should not be adjusted between the hours of 9pm and 1am.

USING THE CHRONOGRAPH

TO SET THE CHRONOGRAPH This chronograph is able to measure and display time in 1 second increments up to a

1. To start the Chronograph feature, press the Start/Stop Button (part B). To measure split times press the Split/Reset Button (part D) to stop counting.
2. Press the Split/Reset Button (part D) to reset the chronograph, and the Chronograph Minute Dial (part F) and the Chronograph Second Hand (part G) will all return to the zero position.
3. For split time, press the Split/Reset Button (part D) again after stopping the chronograph to restart the chronograph function. Then press the Start/Stop Button (part B) to stop, and the Split/Reset Button (part D) to reset.

CHRONOGRAPH RESET

Chronograph Reset (or after replacing the battery)

1. Pull the crown (part C) out to position “2”.
 2. Press the Start/Stop Button (part B) to set the Chronograph Second Hand (part F) to the zero position. The chronograph hand can be advanced rapidly by continuously pressing the Start/Stop Button (part B).
 3. Once the Chronograph Second Hand (part G) has been set to the zero position, push the crown (part C) back into “0” (zero) position.
- To reset the Chronograph Minute (part F)**
1. Press and hold the Start/Stop Button (part B) after the crown is pulled to position “2.”
 2. Press the Split/Reset Button (part D) continuously to advance the chronograph minute hand (part F).
 3. Push the crown (part C) back into the “0”

IMPORTANT

When resetting the chronograph, only return the crown (part C) to the normal “0” (zero) position when the second hand (part G) is in the 12 o’clock position. The second hand stops when the crown is pushed in to the “0” (zero) position and that position is then recognized as the “0” (zero) position.

Stauer®

Afford the Extraordinary.

Stauer Swiss Tactical

INSTRUCTION MANUAL

Visit us at www.stauer.com
to learn more about the fantastic
benefits of owning a Stauer Watch!

www.stauer.com

