


WATCH DISPLAY

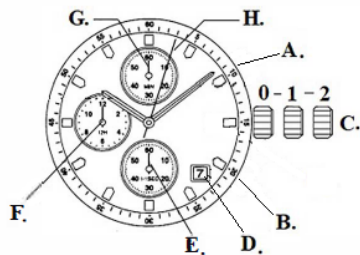

- A. Chrono Start/Stop Pusher (Hidden)
- B. Chrono Reset Pusher (Hidden)
- C. Crown
- D. Date Window
- E. Second Dial
- F. Chrono Hour Dial
- G. Chrono Minute Dial
- H. Chrono Second Hand

TIMESSETTING

SETTING THE TIME

Locate the crown on your Stauer watch (see diagram part C) and note the three crown positions (0-1-2).

1. Pull the crown out to position "2" and rotate the crown clockwise until the desired time is set.
2. When finished setting the time, push the crown back to the "0" (zero) position. At this point the small second hand (dial part E) will begin to move.

SETTING THE DATE

1. Pull the crown out to position "1" and turn the crown counter-clockwise to set the date (Part B).
2. After the date has been set, push the crown (part C) back to position "0" (zero).

NOTE: The date should not be adjusted between approximately 9:00pm and 1:00am.

USING THE CHRONOGRAPH

This chronograph function is able to measure and display elapsed time up to a maximum of 11 hours (part F), 59 minutes (part G), and 59 seconds (part E) in 1 second increment at a time.

1. The chronograph can be started and stopped each time button "A" is pushed.
2. Push button "B" resets the chronograph second hand (part H), chronograph minute hand (part G) and chronograph hour hand (part F) return to the zero position.

To return to normal watch function:

1. Press Button "B" to zero out all of the Chronograph hands.
2. Press Button "B" again to resume normal-watch functions (note that the watch secondhand part "E" will return to the seconds position as if the chronograph feature had never been used.)

CHRONOGRAPH RESET (AFTER REPLACING BATTERY)

Chronograph Reset (includes after replacing the battery). This procedure should be performed when the chronograph second hand does not return to zero position after the chronograph has been reset and after the battery has been replaced.

1. Pull the crown out to position "2" and press button "A" to set the chronograph second hand to the zero position. The chronograph hand can be advanced rapidly by continuously pressing or holding down button "A".
2. Once the hand has been set to zero position, push the crown down to the normal "0" position.

FEATURES

- Precision Quartz Movement
- Chronograph
- Date Window
- Stainless Steel Case Back
- Genuine Leather Strap
- 3 ATM water resistant

NOTE:

This chronograph watch features two invisible buttons (hidden pushers) at 2 o'clock and 4 o'clock positions.

IMPORTANT

Do not push the crown to the normal position while the chronograph second hand returns to the zero position. It stops on the way when the crown is returned to the normal position and its position is recognized as the zero position.

Stauer[®]
HERITAGE OF ART & SCIENCE

INSTRUCTION MANUAL



Visit us at, www.stauer.com to learn more about the fantastic benefits of owning a Stauer Watch. www.stauer.com