


WATCH DISPLAY

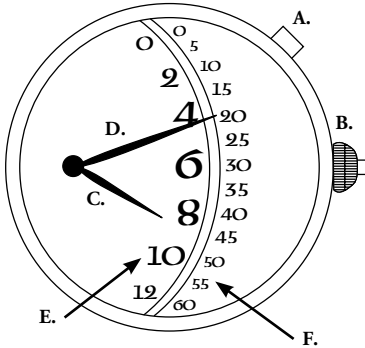

- A - Backward Button
- B - Forward Button
- C - Hour Hand
- D - Minute Hand
- E - Hour Marker
- F - Minute Marker

SETTINGS

This watch features hour and minute hands.

NOTE: Part B is not a normal crown. It is a push button.

TO SET THE TIME

1. Press and hold A or B button for 2 seconds to activate the time-setting mode.
2. Use A or B button to adjust the desired time.

NOTE: The A button moves the hands backwards and the B button moves the hands forwards.

Stauer[®]

Afford the Extraordinary.

1920's Retrograde Watch
INSTRUCTION MANUAL

Visit us at www.stauer.com
to learn more about the fantastic
benefits of owning a Stauer Watch!

www.stauer.com

