


WATCH DISPLAY

TIMESSETTING

USING THE CHRONOGRAPH

CHRONOGRAPH RESET

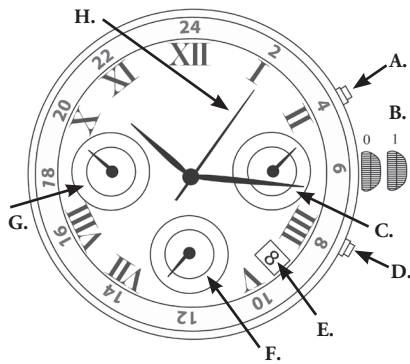

- A - Start/Stop Button
- B - Crown
- C - 24 Hour Dial
- D - Reset Button
- E - Date Window
- F - Watch Seconds Dial
- G - Chronograph Minute Dial
- H - Chronograph Second Hand

TO SET THE TIME

1. Pull the crown (part B) out to position "2" and rotate it clockwise to the desired time.
2. Once the correct time is set, push the crown back into "0" (zero) position. The small Seconds Dial (part F) will start to run.

TO SET THE DATE

1. Pull the crown (part B) out to position "1" and rotate it counter-clockwise to the desired date.
2. Once the correct date is set, push the crown back into "0" (zero) position.

NOTE: The date should not be adjusted between the hours of 9pm and 1am.

TO SET THE CHRONOGRAPH

This chronograph is able to measure and display time in 1/1 second units up to a maximum of 59 minutes (part G) and 59 seconds (part H).

1. To start the Chronograph feature, press the Start/Stop Button (part A).
2. Once stopped, press the Reset Button (part D) to reset to zero.
3. To stop counting, press the Start/Stop Button (part A).

Chronograph Reset (includes after replacing the battery)

1. Pull the crown (part B) out to position "2".
2. Press the Start/Stop Button (part A) to set the Chronograph Second Hand (part G) to the zero position. The chronograph hand can be advanced rapidly by continuously pressing the Start/Stop Button (part A).
3. Once the Chronograph Second Hand (part H) has been set to the zero position, push the crown back into "0" (zero) position.

IMPORTANT

Do not push the crown to the normal position while the chronograph second hand returns to the zero position. It stops on the way when the crown is returned to the normal position and its position is recognized as the zero position.

Stauer®

Afford the Extraordinary.

Stauer
Chronograph Watch

INSTRUCTION MANUAL

Visit us at www.stauer.com
to learn more about the fantastic
benefits of owning a Stauer Watch!

www.stauer.com

