


WATCH DISPLAY

SETTINGS

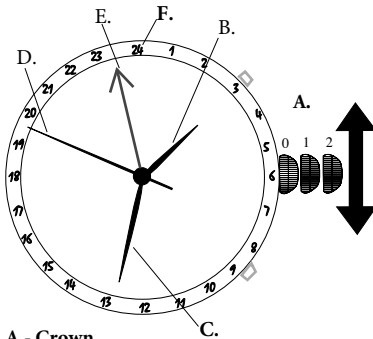

- A - Crown
- B - Hour hand
- C - Minute hand
- D - Second hand
- E - 24 hr. hand or Dual time indicator
- F - 24 hr. markings

NOTE:

The buttons on the right hand side of the watch case are for decorative purpose only.

TO SET THE 24-HOUR TIME

This allows part E. to indicate either a 24-hour clock or time for a different time zone.

1. Pull the crown (part A) out to position "1" and rotate it to the desired time.
2. Once the correct time is set, push the crown back into "0" (zero) position.

TO SET THE PRIMARY TIME

1. Pull the crown (part A) out to position "2" and rotate it to the desired time. Please use the 24-hour clock to indicate AM/PM.
2. Once the correct time is set, push the crown back into "0" (zero) position.

Stauer®

Afford the Extraordinary.

INSTRUCTION MANUAL

Visit us at www.stauer.com
to learn more about the fantastic
benefits of owning a Stauer Watch!

www.stauer.com

