


**MOVEMENT RONDA 6030.D
CHRONOGRAPH QUARTZ**

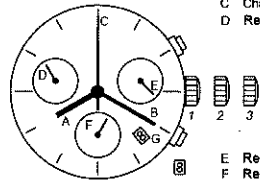


- A Hour hand
- B Minute hand
- C Chronograph seconds hand
- D Recorder 30 minutes

- E Recorder 60 seconds
- F Recorder 12 hours
- G Date display

- Position 1 Operating position
- Position 2 For date correction
- Position 3 For setting the hands (stop-seconds)


SETTING THE COUNTERS

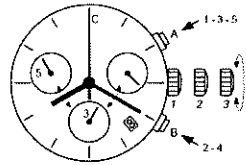

- 1 Pull out the crown to position 3
- 2 Keep pushers A and B pressed simultaneously for at least 2 seconds. The corrective mode is activated
- 3 Step by step adjusting by pushing repeatedly or continuous adjusting by maintaining pressure


- 1 A Adjusting the centre stop second
- 2 B Adjusting the next hand
- 3 A Adjusting the hour counter hand
- 4 B Adjusting the next hand
- 5 A Adjusting the minute counter hand
- 6 Returning the crown to position 1

HOW TO USE THE CHRONOGRAPH

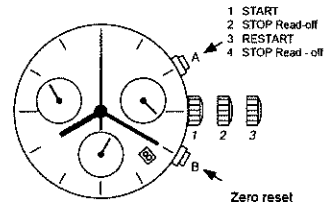

- 1 START
- 2 STOP Read-off
- 3 RESTART
- 4 STOP Read-off

Zero reset

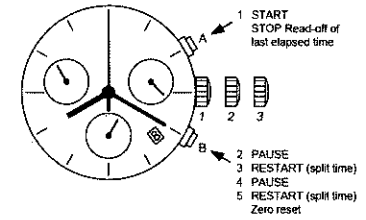

- 1 START
STOP Read-off of last elapsed time
- 2 PAUSE
- 3 RESTART (split time)
- 4 PAUSE
- 5 RESTART (split time)
Zero reset

⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted into any part of the body.



USER MANUAL