


## WATCH DISPLAY

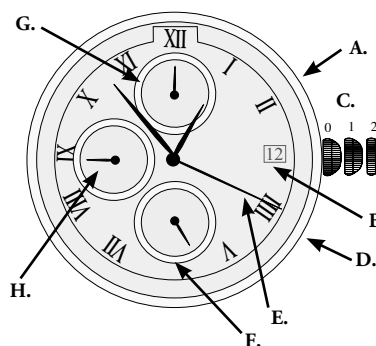

- A - Start/Stop Chrono Button
- B - Date Window
- C - Crown
- D - Chrono Reset Button
- E - Second Hand
- F - Sun/Moon 24 Hour Indicator
- G - Chrono Minute Dial
- H - Chronograph Seconds Dial

## TIME SETTING

### SETTING THE TIME

Locate the crown on your Stauer watch (see diagram part C) and note the three crown positions (0-1-2).

1. Pull the crown (part C) out to position "2" and rotate the crown clockwise until the desired time is set.
2. When finished setting the time, push the crown back to the "0" position. At this point the second hand (part E) will begin to move.

### SETTING THE DATE

1. Pull the crown (part C) out to position "1" and rotate it counter-clockwise to the desired date (part B).
2. Once the correct date is set, push the crown (part C) back into "0" (zero) position.

**NOTE:** The date should not be adjusted between the hours of 9pm and 1am.

## USING THE CHRONOGRAPH

### TO SET THE CHRONOGRAPH

**This chronograph is able to measure and display time up to a maximum of 59 minutes (part G) and 59 seconds (part H).**

1. The chronograph can be started and stopped each time button "A" is pressed.
2. Chrono Reset Button (part D) resets the chronograph. Both the chronograph second hand (part H) and the chronograph minute hand (part G) will return to the zero position.
3. Press the Chrono Reset Button again to resume normal watch functions.

## CHRONOGRAPH RESET

Chronograph Reset (includes after replacing the battery) This procedure should be performed when the chronograph second hand does not return to zero position after the chronograph has been reset and after the battery has been replaced.

1. Pull the crown (part C) out to position "2".
2. Press the Chrono Reset Button (part D) to set the Chronograph Second Hand (part F) to the zero position. The chronograph hand can be advanced rapidly by continuously pressing the Start/Stop Button (part D).
3. Once the Chronograph Second Hand (part F) has been set to the zero position, push the crown (part C) back into "0" (zero) position.

# Stauer®

Afford the Extraordinary.

INSTRUCTION MANUAL



## SAFETY GUIDE

1. The battery is only replaced at a professional service center, and consumers are not allowed to replace the battery themselves.
2. Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. DO NOT dispose of batteries in household trash or incinerate.
3. Even used batteries may cause severe injury or death.
4. Call a local poison control center for treatment information.
5. Battery type: SR626SW
6. Nominal voltage: 1.55V
7. Non-rechargeable batteries are not to be recharged.
8. Do not force discharge, recharge, disassemble. Cannot be heated or incinerated. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
9. Ensure the batteries are installed correctly according to polarity (+ and -).
10. Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
11. Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
12. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

## WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



Visit us at [www.stauer.com](http://www.stauer.com)  
to learn more about the fantastic  
benefits of owning a Stauer Watch!  
**[www.stauer.com](http://www.stauer.com)**