


## WATCH DISPLAY

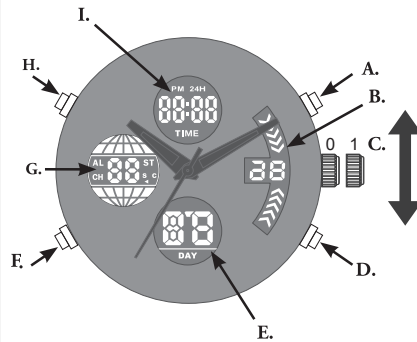

- A - Start/Stop Button
- B - Date
- C - Crown
- D - Split/Reset Button
- E - Day of the Week
- F - Real-Time/Mode Button
- G - Digital Second Display/Alarm
- H - Backlight Button
- I - Digital Time Display

## TIME SETTING

### TO SET THE TIME - ANALOG

1. Pull the crown (part C) out to position "1" and rotate it clockwise to the desired time.
2. Once the correct time is set, push the crown back into the "0" position.

### TO SET THE TIME - DIGITAL

1. Press the Real-Time/Mode Button (part F) three times to Time Setting mode. The Digital Seconds Display (part G) will start to blink. Select an item in the following sequence by pressing the Split/Reset Button (part D): Hour · Minute · Month · Date · Day
2. Press the Start/Stop Button (part A) to adjust each selection above.
3. Press the Real-Time/Mode Button (part F) to return to Real Time Mode.

TIP: You can display two different time zones by setting the digital and analog movements separately.

## USING THE ALARM

### TO SET THE DAILY ALARM/CHIME

1. Press the Real-Time/Mode Button (part F) once to enter Alarm Mode. The Day of the Week dial (part E) will show 'AL,' indicating the alarm is ready to be set.
2. Press the Split/Reset Button (part D) to select the hour or minute setting. Press the Start/Stop Button (part A) to adjust the flashing item.
3. Press the Start/Stop Button (part A) to switch between Alarm, Chime, or Both.
4. To exit the alarm mode, press the Real-Time/Mode Button (part F).
5. Press the Reset Button (part D) to turn the Alarm off.

PLEASE NOTE: You can reset the digital seconds by pressing the Real-Time Mode Button (part F) three times. The Digital Seconds Display (part G) will start flashing. Press the Start/Stop Button (part A) to reset it to zero (0). Press (part F) again to return to Real-Time Mode.

## USING THE CHRONOGRAPH

### TO SET THE CHRONOGRAPH

The display range of the chronograph is 23 hours, 59 minutes and 59.99 seconds. The stopwatch is accurate to 1/100 second.

1. Press the Real-Time/Mode Button (part F) twice to enter the Chronograph Mode.
2. To start the Chronograph feature, press the Start/Stop Button (part A).
3. Once stopped, press the Split/Reset Button (part D) to reset to zero (0).
4. To record split times, press the Split/Reset Button (part D) while the Chrono is running to turn the split timer on/off.
5. To stop counting, press the Start/Stop Button (part A).
6. To reset (set to zero) the split time display, press the Split/Reset Button (part D).
7. To exit the Chronograph mode press the Real-Time/Mode Button (part F) - watch will return to the real-time mode.

## ⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



Battery Type: CR2025  
Nominal Voltage: 3V

Visit us at [www.stauer.com](http://www.stauer.com)  
to learn more about the fantastic  
benefits of owning a Stauer Watch!  
[www.stauer.com](http://www.stauer.com)

**Stauer**<sup>®</sup>  
HERITAGE OF ART & SCIENCE

INSTRUCTION MANUAL

