



P47 Wireless Headphones

P47 Wireless Headphones User Manual

Model: P47 Wireless Headphones

INTRODUCTION

Thank you for purchasing the P47 Wireless Headphones. These over-ear headphones offer a versatile audio experience with both wireless Bluetooth and wired connectivity options. Featuring super bass, volume control, built-in microphone, and support for SD cards and FM radio, they are designed for comfort and high-fidelity stereo surround sound. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance.

WHAT'S IN THE BOX

- P47 Wireless Headphones (Red)
- USB Charging Cable
- 3.5mm Audio Cable
- Instruction Manual



Image: The P47 Wireless Headphones in red, shown alongside their retail packaging, illustrating the product and its box.

PRODUCT OVERVIEW

Familiarize yourself with the key components and controls of your P47 Wireless Headphones.



P47

5.0+EDR Wireless



-  Play/Suspend/
Answer/Hang on Call
- M** FM/Wireless/Line-in Mode
-  Power Supply
- + >>** Volume+/Next Song
- << -** Volume-/Previous Song

Image: A detailed diagram highlighting the control buttons on the P47 Wireless Headphones, including Play/Suspend, Answer/Hang on Call, FM/Wireless/Line-in Mode, Power Supply, Volume+/Next Song, and Volume-/Previous Song.

Play/Suspend / Answer/Hang on Call Button: Controls media playback and manages phone calls.

M (Mode) Button: Switches between FM, Wireless (Bluetooth), and Line-in modes.

Power Supply Button: Turns the headphones on or off.

Volume+/Next Song Button: Increases volume or skips to the next track.

Volume-/Previous Song Button: Decreases volume or goes to the previous track.

Microphone: For hands-free calling.

3.5mm Audio Jack: For wired connection.


Micro USB Charging Port: For charging the headphones.

SD Card Slot: For playing music directly from an SD card.

Soft Memory Protein Earmuff



Snug Pad

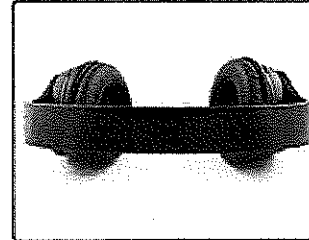

Flexible to Fit Head Shapes



Adjustable Headband

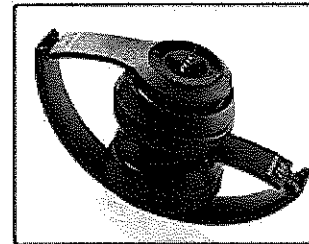


Image: A diagram illustrating the comfort features of the P47 Wireless Headphones, including soft memory protein earmuffs, snug pads, flexible design to fit various head shapes, and an adjustable headband.

SETUP

1. Charging the Headphones

Before first use, fully charge your headphones. Connect the supplied USB charging cable to the micro USB port on the headphones and the other end to a USB power source (e.g., computer USB port, wall adapter). The LED indicator will show charging status (usually red while charging, off or blue when fully charged). A full charge takes approximately 1-2 hours.

2. Powering On/Off

- **To Power On:** Press and hold the Power Supply button for a few seconds until the LED indicator lights up and you

4. Select "P47" from the list of found devices.
5. Once paired, the LED indicator will flash blue slowly, and you will hear a connection confirmation sound.
6. If prompted for a password, enter "0000".

The headphones will automatically attempt to reconnect to the last paired device when powered on.

4. Wired Connection (Line-in Mode)

You can use the headphones with a 3.5mm audio cable for a wired connection, even if the battery is depleted. Simply plug one end of the 3.5mm audio cable into the headphone's 3.5mm audio jack and the other end into your audio device's headphone jack. The headphones will automatically switch to Line-in mode.

OPERATING INSTRUCTIONS

Music Playback

- **Play/Pause:** Press the Play/Suspend button once.
- **Next Track:** Press and hold the Volume+/Next Song button.
- **Previous Track:** Press and hold the Volume-/Previous Song button.
- **Volume Up:** Short press the Volume+/Next Song button.
- **Volume Down:** Short press the Volume-/Previous Song button.

Call Management

- **Answer/End Call:** Press the Answer/Hang on Call button once.
- **Reject Call:** Press and hold the Answer/Hang on Call button for 2 seconds.
- **Redial Last Number:** Double-press the Answer/Hang on Call button.

Mode Switching (M Button)

Press the 'M' button to cycle through the available modes:

- **Bluetooth Mode:** For wireless audio from your paired device.
- **FM Radio Mode:** To listen to FM radio stations.
- **SD Card Mode:** If an SD card with audio files is inserted.
- **Line-in Mode:** When a 3.5mm audio cable is connected.

In FM Radio Mode, short press the Play/Suspend button to auto-scan and save stations. Use Volume+/Volume- to switch between saved stations.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the headphones. Do not use abrasive cleaners or solvents.

Problem	Solution
Headphones do not power on.	Ensure the headphones are fully charged. Connect to a power source and try again.
Cannot pair with Bluetooth device.	<ul style="list-style-type: none"> • Ensure headphones are in pairing mode (LED flashing blue/red). • Make sure Bluetooth is enabled on your device. • Move headphones closer to your device. • Forget "P47" from your device's Bluetooth list and try pairing again. • Restart both the headphones and your device.
No sound in wireless mode.	<ul style="list-style-type: none"> • Check if headphones are properly paired. • Adjust volume on both headphones and your device. • Ensure the correct audio output is selected on your device.
No sound in wired mode.	<ul style="list-style-type: none"> • Ensure the 3.5mm audio cable is fully inserted into both the headphones and the audio source. • Test with a different 3.5mm audio cable if available. • Check the volume on your audio source.
Poor sound quality.	<ul style="list-style-type: none"> • Move closer to your Bluetooth device to avoid interference. • Ensure the audio source is of good quality. • Check for physical damage to the headphones or cables.

SPECIFICATIONS

Feature	Detail
Model Name	Wireless Headphones P47
Connectivity Technology	Wireless (Bluetooth), Wired (3.5mm Jack)
Wireless Communication	Bluetooth 5.0
Headphones Jack	3.5 mm Jack
Battery Life	Approximately 5-8 Hours (Usage dependent)
Charging Time	Approximately 1-2 Hours
Frequency Range	20 Hz - 20,000 Hz
Material	Acrylonitrile Butadiene Styrene (ABS)
Earpiece Shape	Over Ear
Control Type	Button Control
Microphone	Built-in
Special Features	Foldable, SD Card Support, FM Radio, LED Lights, Super Bass
Water Resistance Level	Waterproof

WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For detailed warranty information, please refer to the warranty card included in your product packaging or contact the retailer where you purchased the product. For technical support or further assistance, please reach out to the customer service department of the brand or retailer. Please retain your proof of purchase for any warranty claims.