


WATCH DISPLAY

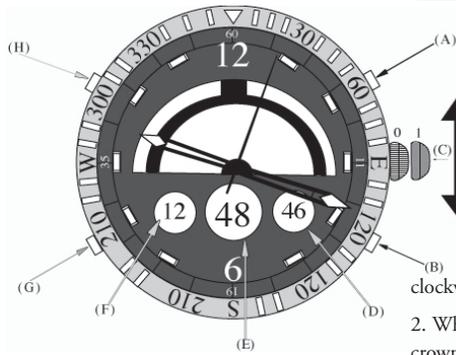

- A - Month, Date and Day of Week Button.
- B - Alarm-Time.
- C - Crown
- D - Minute Dial
- E - Seconds Dial
- F - Hour Dial
- G - Stop Watch function.
- H - Indigo Light

TIMESSETTING

Locate the crown on your Stauer watch (see diagram part C). Please note the two crown positions (0-1) in part C of diagram.

1. To set the time: Pull the crown out to position "1" (see diagram part C) which will allow you to position watch hands for proper time selection. Rotate the crown clockwise until the desired time is set.
2. When finished setting the time, push the crown back to the "0" (zero) position.

SETTING THE DIGITAL DISPLAY TIME

Press the "G" button three times: This will start time in setting mode. The "seconds/E" will start flashing.

1. Press the "B" button: The "MIN" will flash. Press "A" button to advance.

2. Press the "B" button: The "HOUR" will flash. Press "A" button to advance.
3. Press the "B" button: The "DATE" will flash. Press "A" button to advance.
4. Press the "B" button: The "MONTH" will flash. Press "A" button to advance.
5. Press the "B" button: The "Week-DAY" will flash. Press "A" button to advance.
6. Press the "G" button: Return to the regular-time display.

SETTING THE ALARM

Press & hold the "B" button: Alarm Time will show.

1. Press the "G" button twice: Alarm Time, "Hour" Flashes, Press "A" button to advance.
2. Press the "B" button once: Alarm Time, "Min" Flashes, Press "A" button to advance.

3. Press the "G" button once: Alarm Time setting-mode is complete, & will return to regular time read-out.

SET ALARM FUNCTION

Depress & Hold the "B" button, and press "A" button, Alarm "FLAG" will appear.

If you hear the alarm-sound, this will stop itself after 20 seconds, or can be silenced by pressing the "A" button. (the alarm will go off again same time the next Day.)

CHIME SETTINGS

Press & hold the "B" button and press "G" button to adjust Chime.

- 1) Chime is activated by Turning-On the Alarm setting, and the all day "FLAG" appears
- 2) Deactivate Chime by Turning-Off the alarm setting, and the all day "FLAG" disappears.

TIMESSETTING CONT.

STOP WATCH FUNCTION

1. Press "A" to start timing, to stop press "A" again.
2. To reset timer press "B".
3. Press the "G" button to return to regular time.

SPLIT TIMER

4. Press "A" to start timing.
5. Press "B" to freeze the screen.
6. Press "B" again to unfreeze the screen.
7. Repeat steps 5 & 6 to split the time again.
8. To zero out the count timer repeat steps 1 & 2.
9. Press the "G" button to return to regular time reading.

In all time-modes, you can press the "H" button to illuminate LCD display for better viewing.

FEATURES

- Hour, Minute, second, day of the week, Month and Date functions.
- Split second function.
- Alarm with Chime.
- 12 / 24 Hour Display for user's option.
- Maximum Counting: 23 Hrs 59 Min 59 Sec
- E. L Back- Light Function.

ADJUSTING CLASPS

To adjust the band: Remove equal number of links from both sides of the closure by carefully sliding out the pins in each link. To do this, you will need to use a sharp pointed tool. Insert it into the recessed side of the link. With a solid tap, push the pin out until it is easy to pull the pin using needle nose pliers. Once the required amount of links are removed, join the remaining links together using the removed pins. It is necessary to secure the pins in place by making sure that they are flush with one side of each link. To ensure that watch is fitted properly, we recommend that your Stauer watch be handled by a professional.

Visit us at, www.stauer.com to learn more about the fantastic benefits of owning a Stauer Watch! www.stauer.com

Stauer

HERITAGE OF ART & SCIENCE

Stauer Hybrid Watch

INSTRUCTION MANUAL

